

# **HP 4500/4550 (C4197A) MAINTENANCE KIT INSTRUCTIONS**

## **\*\*\*\*\* WARNING \*\*\*\*\***

**Turn the printer off, unplug it. And allow it to sit for 30 minutes before performing user maintenance procedures**

The following parts are included in this maintenance kit

1	RG5-5154	Fusing Assembly
1	RF5-2092	Feed Roller
3	RF5-1885	Separation Rollers (RF5-2490)
1	RB2-1282	Large Filter
1	RB2-1283	Small Filter

### **Fuser Installation**

- 1 If the printer has a duplex printing accessory then open the rear cover of the duplex printing accessory.
- 2 If the printer does not have a duplex printing accessory then open the rear door of the printer.
- 3 Release the straps from the rear door by squeezing the latches on the straps where they connect to the rear door and lower the door.
- 4 Inside the back of the printer, near the bottom, locate the two blue latches on the fuser.
- 5 Rotate the two blue latches upward 90 degrees.
- 6 Grasp the finger holds on the fuser and pull the used fuser out of the printer.
- 7 Remove the new fuser from the bag and holding the new fuser by the finger holds, slide the fuser into the printer.
- 8 Lock the fuser in place by rotating the two blue latches down.

### **Large and Small Filter Replacement**

- 1 Remove the two used air filters from the rear of the printer. Then use the hand wipe to clean the fan areas.
- 2 Remove the new air filters from the bag and Insert the new air filters.
- 3 Reconnect the support straps to the upper rear door.
- 4 Close the upper rear door of the printer
- 5 If a duplex printing accessory is installed, close the accessory's rear cover.

### **Feed Roller Replacement**

- 1 Locate the paper roller for inside the printer. The pattern and shape on the end of it is different from the other three paper rollers.
- 2 Form the front of the printer, pull out Tray 2
- 3 Inside the tray cavity on the printer, locate the paper roller in the top of the tray cavity.
- 4 Squeeze the tabs on the roller and remove the old paper roller from the tray cavity.
- 5 Install the new paper roller in the tray cavity by sliding it onto the spindle until the roller clicks into place.

### **Separation Roller Replacement**

- 1 On Tray 2, Locate the paper roller with a blue hub and the cover next to the roller.
- 2 Squeeze the cover release lever and open the cover.
- 3 Remove the old paper roller from Tray 2 by squeezing together the blue tabs and then sliding the roller off its spindle.
- 4 Install a new paper roller on Tray 2 by sliding the new roller onto the spindle until the roller clicks into place.
- 5 Close the cover.
- 6 Insert Tray 2 into the printer.
- 7 If the printer has a 500-sheet paper feeder accessory (Tray 3) repeat steps for Feed and Separation Roller Replacement
- 8 The roller in the tray 3 cavity slides the opposite direction as the roller in the tray 2 cavity

### **Resetting the FUSER LIFE OUT**

- 1 Turn printer on and wait until the printer control panel displays *READY*. Then, to reset the printer for the new fuser kit, push *MENU* on the control panel until *RESETS MENU* appears.
- 2 Press *ITEM* until *NEW FUSER KIT, SELECT IF DONE* appears. Then press *SELECT*.
- 3 Press *GO* to return the printer to *READY*.
- 4 Installation is complete.